

MITSUBISHI

GT15 STAND

User's Manual

GT15-90STAND
GT15-80STAND
GT15-70STAND

Thank you for purchasing the GOT1000 Series.

Prior to use, please read both this manual and detailed manual thoroughly to fully understand the product.

Table with 2 columns: MODEL, MODEL CODE and 2 rows of values: GT15-STAND-U, 1D7M00, IB(NA)-0800294-C(0507)MEE

GRAPHIC OPERATION TERMINAL
GOT1000

SAFETY PRECAUTIONS

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product. In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".

DANGER Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the CAUTION level may lead to a serious accident according to the circumstances. Always follow the precautions of both levels because they are important to personal safety. Please save this manual to make it accessible when required and always forward it to the end user.

INSTALLATION PRECAUTIONS

DANGER

- Make sure to externally shut off the all phases of the system power supply before mounting/removing the GOT onto/from the stand. Failure to do so may cause the unit to fail or malfunction.

CAUTION

- Use this stand in an environment which satisfies the general specifications described in the GT15 User's Manual. Using in an environment other than that satisfies the general specifications may cause an electric shock, a fire, or damage or deterioration to the GOT.
Be careful not to get your finger caught when removing the angle adjusting screws from the stand and adjusting the mounting angle.
When mounting the GOT onto the stand, fix it with the mounting fixtures securely and tighten the screws in the specified torque range. Loose tightening may cause the GOT to drop off from the stand.
Make sure that mounting angle is 45, 55, 65 or 75 degrees, when adjusting the mounting angle with the GOT mounted on the stand. If mounting angle is set to other than above, the GOT bottom may interfere with the stand bottom, resulting in the GOT damage.

DISPOSAL PRECAUTIONS

CAUTION

- Dispose of this product as industrial waste.

Manuals

The following shows manuals relevant to this product.

Table with 2 columns: Manual name, Manual name and 2 rows of values: Detailed Manual, GT15 User's Manual (Option)

Relevant Manuals

For relevant manuals, refer to the PDF manual stored within the drawing software used.


© 2004 MITSUBISHI ELECTRIC CORPORATION

1. Overview

This User's Manual describes the GT15 stand (hereafter abbreviated to the stand). Refer to the GT15 User's Manual for the applicable GOT.


Table with 3 columns: Product name, Model name, Description and 3 rows of values: Stand, GT15-90STAND, GT15-80STAND, GT15-70STAND

The stand is useful for debugging the GOT screen data, as it can set the GOT at a proper angle on a table.

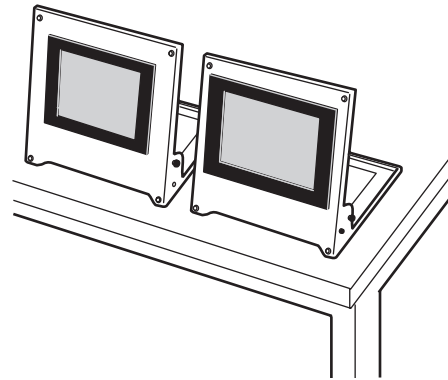

2. How to Use Stand

- (1) Adjust the mounting angle with the angle adjusting screw.

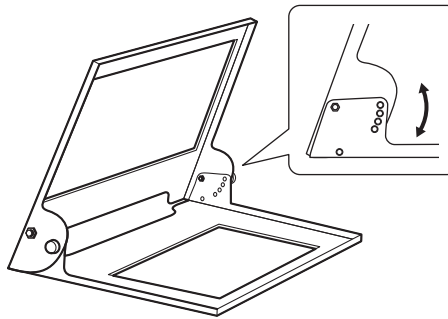

(For GT15-70STAND)

- (2) Put the GOT into the Stand from the front and fix it using the fixtures. For the GOT mounting method, refer to the GT15 User's Manual.
(3) After the installation, perform wiring, etc.

3. External Dimensions

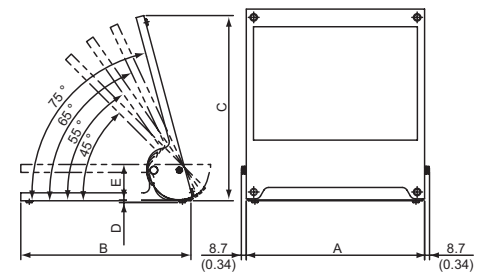


Table with 6 columns: Model name, Type of GOT mounted, A, B, C, D, E and 6 rows of values for different models and mounting angles.

Unit: mm (inch)

\* Dimensions for mounting angle of 75 degrees

Table with 2 columns: Model name, Weight and 3 rows of values: GT15-90STAND, GT15-80STAND, GT15-70STAND

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Table with 2 columns: Country/Region, Sales office/Tel and multiple rows of contact information for various countries including U.S.A, Brazil, Germany, U.K, Italy, Spain, France, South Africa, Hong Kong, China, Taiwan, Korea, Singapore, Thailand, Indonesia, India, and Australia.

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE : 1-8-12, OFFICE TOWER 2 14F HARUMI CHUO-KU 104-6212 JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.
Specifications subject to change without notice.
Printed in Japan on recycled paper.