

CL1XY2-DT1D5S  
CC-Link/LT Remote I/O Module

Please read this manual thoroughly before starting to use the product and handle the product properly.

User's Manual



MODEL	CL1XY2-DT1D5S
MANUAL Number	JY997D03801D
Date	DECEMBER 2003

●SAFETY PRECAUTIONS●  
(Read these precautions before using)

Please read this manual carefully and pay special attention to safely in order to handle this product properly. Also pay careful attention to safely and handle the module properly.

These precautions apply only to Mitsubishi equipment. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.

These ●SAFETY PRECAUTIONS● classify the safety precautions into two categories: "DANGER" and "CAUTION".

**DANGER** Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.

**CAUTION** Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by **CAUTION** may also be linked to serious results. In any case, it is important to follow the directions for usage. Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

**DANGER**

- Configure an interlock circuit in a sequence program so that the system operates on the safety side using the communication status information in the event the data link falls into a communication problem.
- Otherwise, erroneous output and malfunction may result in accidents.
- Remote input and output can not be switched ON or OFF when a problem occurs in the remote I/O modules. Therefore build an external monitoring circuit that will monitor any input signals that could cause a serious accident.

**CAUTION**

- Do not have control cables and connection cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.
- Use the module in the status in which any force is not applied on the module, flat cables dedicated to CC-Link/LT and flat cables for I/O.
- If a force is applied, wire breakage or failure may be caused.

[INSTALLATION PRECAUTIONS]

**CAUTION**

- Use the module in an environment that meets the general specifications contained in this manual. Using this module in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module.

[WIRING PRECAUTIONS]

**DANGER**

- Perform installation and wiring after disconnecting the power supply at all phases externally. If the power is not disconnected at all phases an electric shock or product damage may result.

**CAUTION**

- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire, product failure or malfunction.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Do not short-circuit the 24G and +24V terminals. It may result in fire, product failure or malfunction.
- Attach a warning label (hazard symbol 417-IEC-5036) concerning the electric shock to the location.

[STARTING AND MAINTENANCE PRECAUTIONS]

**DANGER**

- Do not touch the terminals when the power is ON. It may cause an electric shock or malfunction.
- Perform cleaning the module after turning OFF the all external power supply for sure. Failure to do so may cause failure or malfunction of the modules.

**CAUTION**

- Do not disassemble or modify the module. Doing so may cause failure, malfunction, injury, or fire.
- The module case is made of resin; do not drop it or subject it to strong shock. A module damage may result.
- Make sure to switch all phases of the external power supply OFF before installing or removing the module to/from the panel. Failure to do so may cause failure or malfunction of the modules.

[DISPOSAL PRECAUTIONS]

**DANGER**

- When disposing of this product, treat it as industrial waste.

[TRANSPORTATION AND MAINTENANCE PRECAUTIONS]

**CAUTION**

- During transportation avoid any impact as the module is a precision instrument. Doing so could cause trouble in the module.
- If it is necessary to check the operation of module after transportation, in case of any impact damage.

●Notification of CE marking●

This notification does not guarantee that an entire mechanical module produced in accordance with the contents of the notification comply with the following standards. Compliance to EMC standards of the entire mechanical module should be checked by the user / manufacturer.

Standards with which this product complies


Type : Programmable Controller (Open Type Equipment) Remote I/O module  
Models : Products manufactured from November 1st, 2002.

Electromagnetic Compatibility Standards (EMC)	Remark
EN61000-6-4:2001 Electromagnetic compatibility -Generic standards - Emission standard for Industrial environment	Compliance with all relevant aspects of the standard. (Radiated Emissions and Mains Terminal Voltage Emissions)
EN61131-2:1994 Programmable controllers /A11: 1996 -Equipment requirements and tests /A12: 2000	Compliance with all relevant aspects of the standard. (RF Immunity, Fast transients, ESD and Damped oscillatory wave)


For more details please contact the local Mitsubishi Electric sales site.  
- Notes For compliance to EMC regulation.  
It is necessary to install the CL1 series module in a shielded metal control panel.

1. Outline of Product

This product is a cable type composite I/O module connected to CC-Link/LT. This product has one input point (24V DC) and one output point (transistor output).

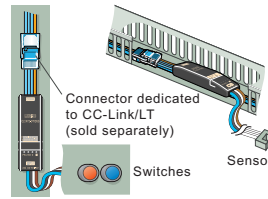

2. Name and Setting of Each Part

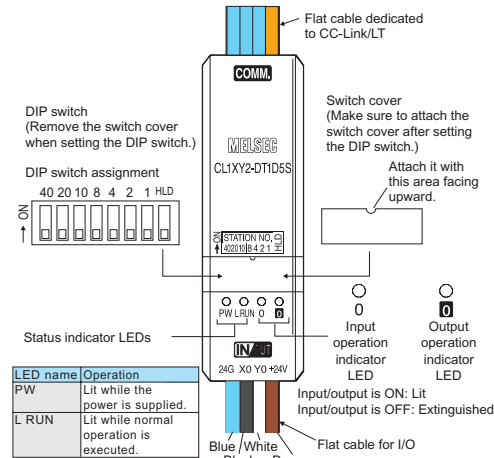

Name	Description																							
Status indicator LED	PW ON while the power is supplied.																							
	L RUN ON while normal operation is executed.																							
I/O operation indicator LED	ON while the input or output is ON. Extinguished while the input or output is OFF.																							
	X0 input operation indicator LED    Y0 output operation indicator LED																							
Flat cable dedicated to CC-Link/LT	24G Connector for CC-Link/LT communication line/module power supply																							
	DB																							
	DA +24V																							
Flat cable for I/O	Blue 24G																							
	Black X0																							
	White Y0																							
	Brown +24V																							
DIP switch	Set the 10's digit of the station No. using "STATION NO. 10", "STATION NO. 20" and "STATION NO. 40". Set the 1's digit of the station No. using "STATION NO. 1", "STATION NO. 2", "STATION NO. 4" and "STATION NO. 8". Factory default = All bits are OFF. Make sure to set the station No. in the range from 1 to 64. Example: When setting the station No. to "32", set the DIP switch as follows.																							
	<table border="1"> <thead> <tr> <th>Station No.</th> <th>10's digit</th> <th>1's digit</th> </tr> </thead> <tbody> <tr> <td>40</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>20</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>10</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>8</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>4</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>2</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>1</td> <td>OFF</td> <td>OFF</td> </tr> </tbody> </table>	Station No.	10's digit	1's digit	40	OFF	ON	20	ON	ON	10	ON	OFF	8	OFF	OFF	4	OFF	ON	2	ON	OFF	1	OFF
Station No.	10's digit	1's digit																						
40	OFF	ON																						
20	ON	ON																						
10	ON	OFF																						
8	OFF	OFF																						
4	OFF	ON																						
2	ON	OFF																						
1	OFF	OFF																						


Name	Description
DIP switch	HLD Holds the output (when an error has occurred). ON: Holds the output. OFF: Clears the output.

3. Cautions on Handling


3.1 Handling of flat cable for I/O

The cable length from the module to a sensor shall be within 3m(9'10"). Measure the cable outside the module, and confirm that the driving voltage for the used sensor is assured.


• Input

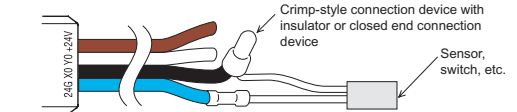

• Output

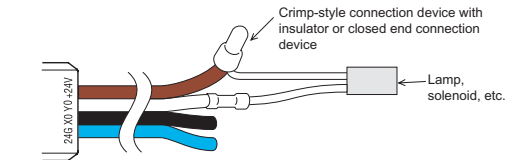


If the diameter of the I/O equipment connection cable is equivalent to the diameter of the flat cable for I/O of this module, connectors dedicated to CC-Link/LT can be used for connection.

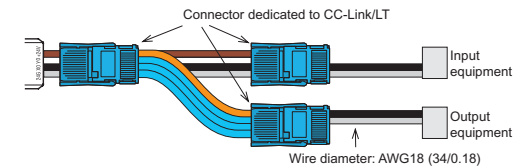

3.2 Handling of cable


Do not bend the cable within 30mm(1.18") from the module.

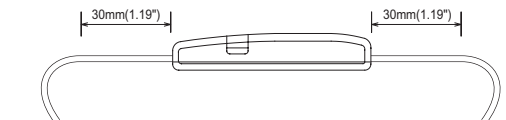

Use a crimp-style terminal in a status in which no force is applied on the cable.

3.3 Mounting with the CL1-HLD (module holder)

Refer to the figures below for details on mounting or removing the remote I/O module when used with the CL1-HLD.

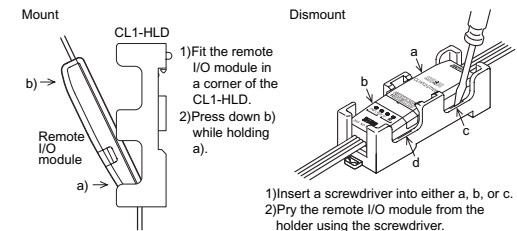


## 4. Connection to External Equipment

### 4.1 External wiring


The input and output terminals of the CL1XY2-DT1D5S operate while using the power supplied from the interface. When connecting a sensor to the input terminal, use a sensor of the NPN open collector transistor type. The output wiring is fixed to the sink output.

### I/O wiring

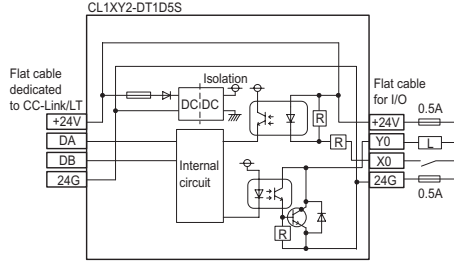

### 4.2 Connection to sensor

- When using a two-wire type sensor
- When using a three-wire type sensor

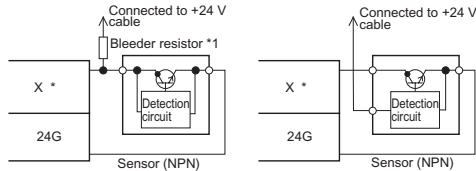


Replace \* in the figure with the used input No.

### Notes:

#### \*1 Bleeder resistor

When connecting a two-wire type sensor or input equipment having parallel resistor, select a sensor or equipment whose leakage current is 1.7mA or less. If the leakage current is more than 1.7mA, connect a bleeder resistor obtained in the following calculation formula.

#### Circuit image

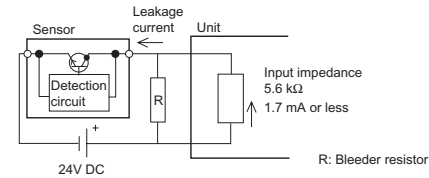

$$R(k\Omega) < 1.7(mA) / \text{Leakage current}(mA) - 1.7(mA) \times 5.6(k\Omega)$$

The power capacity W of the bleeder resistor R is as follows:

$$W = (\text{Input voltage})^2/R$$

- Make sure that both the ON and OFF time of the input signal are 1.5ms or more.

## 5. Specifications

### 5.1 General specifications

Item	Specification				
<b>Ambient working temperature</b>	0 to 55°C (32 to 131°F) (*1)				
<b>Ambient storage temperature</b>	-25 to 75°C (-13 to 167°F) (*1)				
<b>Ambient operating humidity</b>	Conforming to JIS B3502 and IEC61131-2, Level RH-2 (5 to 95%RH: Dew condensation shall not be considered.)				
<b>Ambient storage humidity</b>	Conforming to JIS B3502 and IEC61131-2, Level RH-2 (5 to 95%RH: Dew condensation shall not be considered.)				
<b>Vibration resistance</b>	When intermittent vibration is present	Number of times of sweep 10 times in each of X, Y and Z directions (for 80 min)			
	Conforming to JIS B3502 and IEC61131-2		Frequency	Acceleration	Half amplitude
	10 to 57Hz		-	0.075mm	
	57 to 150Hz		9.8m/s <sup>2</sup>	-	
When continuous vibration is present	Frequency	Acceleration	Half amplitude		
10 to 57Hz	-	0.035mm			
57 to 150Hz	4.9m/s <sup>2</sup>	-			
<b>Impact resistance</b>	Conforming to JIS B3502 and IEC61131-2 (147 m/s <sup>2</sup> , 3 times in each of X, Y and Z directions)				
<b>Operating atmosphere</b>	Corrosive gas shall not be present.				
<b>Operating altitude</b>	Conforming to JIS B3502 and IEC61131-2 (2,000m(6561'8") or less)(*2)				
<b>Installation place</b>	Inside control panel (*3)				
<b>Over-voltage category</b>	Conforming to JIS B3502 and IEC61131-2 (Category II or less)(*4)				
<b>Degree of contamination</b>	Conforming to JIS B3502 and IEC61131-2, Degree of contamination 2 or less (*5)				

### Notes:

- The ambient operating/storage temperature satisfies the requirements beyond the specification in the JIS B3502 and the IEC61131-2.
- The module cannot be used in an environment pressurized above the atmospheric pressure which can be generated around the altitude of 0 m. If the module is used in such an environment, it may fail.
- The module can be used in any environment even outside the control panel as far as the requirements of the ambient operating temperature, the ambient operating humidity, etc. are satisfied.
- This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300V is 2500V.
- This index indicates the degree of conductive generating substances in the environment in which the module is used. The degree of contamination 2 indicates that contamination is caused by generation of only non-conductive substances. In this degree, however, temporary conduction may be caused by accidental condensation.

### 5.2 Input specifications

Item	Specification	
<b>Input method</b>	DC input (using module power supply in common) EN61131-2, Section 3.3.1.2-Type 1	
<b>Number of input</b>	1 point	
<b>Isolation method</b>	Isolation with photocoupler	
<b>Rated input voltage</b>	24V DC	
<b>Rated input current</b>	Approx. 4 mA	
<b>Operating voltage range</b>	Same as module power supply	
<b>Max. simultaneous ON input points</b>	100% (at 24V DC)	
<b>ON voltage/ON current</b>	19 V or more/3 mA or more	
<b>OFF voltage/OFF current</b>	11 V or less/1.7 mA or less	
<b>Input resistance</b>	5.6 kΩ	
<b>Response time</b>	<b>OFF→ON</b>	1.5 ms or less (at 24V DC)
	<b>ON→OFF</b>	1.5 ms or less (at 24V DC)
<b>Common wiring method</b>	1 point/1 common (Mutually exclusive output)	


### 5.3 Output specifications

Item	Specification	
<b>Output method</b>	Transistor output (using module power supply in common) (sink)	
<b>Number of output</b>	1 point	
<b>Isolation method</b>	Isolation with photocoupler	
<b>Rated load voltage</b>	24V DC	
<b>Operating load voltage range</b>	Same as module power supply	
<b>Max. load current</b>	0.1A/point 0.2 A/1 common	
<b>Max. inrush current</b>	0.4A/10 ms	
<b>Leakage current at OFF</b>	0.1mA or less/30V DC	
<b>Max. voltage drop at ON</b>	1V or less (max.)/0.1A	
<b>Response time</b>	<b>OFF→ON</b>	1.0ms or less
	<b>ON→OFF</b>	1.0ms or less
<b>Surge suppression</b>	Zener diode	
<b>Common wiring method</b>	1 point/1 common (Mutually exclusive output)	
<b>Internal protection for outputs</b>	Internal protection circuit none Please connect the fuse in the connected load outside.	

### 5.4 Performance specifications

Item	Specification	
<b>Module power supply</b>	<b>Voltage</b>	20.4 to 28.8V DC (24V DC -15% to +20%) Ripple ratio: Within 5%
	<b>Current consumption</b>	40mA (when all points are ON) (Current consumption contains neither the input current nor the load current.)
	<b>Initial current</b>	70mA
	<b>Max. allowable momentary power failure period</b>	PS1:1ms
<b>Number of stations occupied</b>	4-, 8- or 16-point mode: 1 station	
<b>Noise durability</b>	500Vp-p Noise width: 1μs Cycle: 25 to 60 Hz (by noise simulator)	
<b>Withstand voltage</b>	500V AC for 1 min	
<b>Isolation resistance</b>	10 MΩ or more between primary area (external DC terminal) and secondary area (internal circuit) by 500V DC megger	
<b>Protection class</b>	IP2X	
<b>I/O part connection method</b>	Connection with cable	
<b>Module installation method</b>	Can be installed in six directions	
<b>Flat cable for I/O (wire diameter)</b>	AWG18 (34/0.18)	
<b>Mass (weight)</b>	0.07 kg (0.15 lbs) (including 500mm (19.69") flat cable dedicated to CC-Link/LT and 500mm (19.69") flat cable for I/O)	


## 6. Outside Dimensions

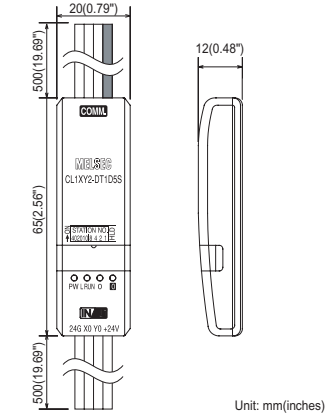

Unit: mm(inches)

### Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

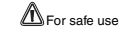

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Tel : +1-847-478-2100 MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Av. Rio Branco, 123-15, and S/1507, Rio de Janeiro, RJ CEP 20040-005, Brazil Tel : +55-21-221-8343	China	Ryoden International Shanghai Ltd. 3F Block3 Building Automation Instrumentation Plaza 103 Cao Bao Rd. Shanghai 200233 China Tel : +86-21-6475-3228
Brazil	Mitsubishi Electric Europe B.V. German Branch Golhofer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Taiwan	Setsuyo Enterprise Co., Ltd. 6F, No.105 Wu-Kung 3rd RD, Wu-Ku Hsiang, Taipei Hsin, Taiwan Tel : +886-2-2299-2499
Germany	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8BX, UK Tel : +44-1707-276100	Korea	HAN NEUNG TECHNO CO., LTD. 1F Dong Seo Game Channel Bldg., 660-11, Deungchon-dong Kangsecku, Seoul, Korea Tel : +82-2-3660-9552
U.K	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colsoni, Pal. Persico - Ingr2 Via Paracelso 12, 20041 Agrate B., Milano, Italy Tel:+39-039-60531	Singapore	Mitsubishi Electric Asia Pte. Ltd. 307 ALEXANDRA ROAD #05-01/02, SINGAPORE 159943 Tel : +65-473-2480
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80 08190 - Sant Cugat del Valles, Barcelona, Spain Tel:+34-935-653135	Thailand	F.A. Tech Co., Ltd. 890/28,29,30 S.V.City Building,Office Tower 2, Floor 17-18 Rama 3 Road, Bangkokpingsang, Yamnawa, Bangkok 10120 Tel : +66-2-682-6522
Italy	Mitsubishi Electric Europe B.V. South Africa Circuit Breaker Industries LTD. Private Bag 2016, Isando 1600, Johannesburg, South Africa Tel : +27-11-928-2000	Indonesia	PT. Autoteknindo SUMBER MAKMUR Jl. Muara Karang Selatan Block4 Utara No.1 Kav. No.11 KawasanIndustri/ Pergudangan,Jakarta - Utara 14440 Tel : +62-21-663-0833
India	Ryoden Automation Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong Tel : +852-2887-8870	India	Messung Systems Pvt.Ltd. Electronic Sadan NO:111 Unit No15, M.I.D.C BHOSARI PUNE-411026 Tel : +91-20-7128927
Hong Kong		Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, PostalBag, No.2, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

**MITSUBISHI ELECTRIC CORPORATION**  
HEAD OFFICE : MITSUBISHI DENKI BLDG MARUNOUCHI TOKYO 100-8310 TELEX:24332 CABLE MELCO TOKYO  
HIMEJI WORKS : 840 CHIVODA CHO, HIMEJI, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications are subject to change without notice



**CL1XY2-DT1D5S**  
 CC-Link/LT Remote I/O Module

Please read this manual thoroughly before starting to use the product and handle the product properly.

**User's Manual**

MODEL	CL1XY2-DT1D5S
MANUAL Number	JY97D03801D
Date	DECEMBER 2003

**SAFETY PRECAUTIONS**  
 (Read these precautions before using)

Please read this manual carefully and pay special attention to safety in order to handle this product properly. Also pay careful attention to safety and handle the module properly.

These precautions apply only to Mitsubishi equipment. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.

These **SAFETY PRECAUTIONS** classify the safety precautions into two categories: "DANGER" and "CAUTION".

**DANGER** Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.

**CAUTION** Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by **CAUTION** may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

**DESIGN PRECAUTIONS**

**DANGER**

- Configure an interlock circuit in a sequence program so that the system operates on the safety side using the communication status information in the event the data link falls into a communication problem.
- Otherwise, erroneous output and malfunction may result in accidents.
- Remote input and output can not be switched ON or OFF when a problem occurs in the remote I/O modules. Therefore build an external monitoring circuit that will monitor any input signals that could cause a serious accident.

**CAUTION**

- Do not have control cables and connection cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.
- Use the module in the status in which any force is not applied on the module, flat cables dedicated to CC-Link/LT and flat cables for I/O. If a force is applied, wire breakage or failure may be caused.

**INSTALLATION PRECAUTIONS**

**CAUTION**

- Use the module in an environment that meets the general specifications contained in this manual. Using this module in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module.

**WIRING PRECAUTIONS**

**DANGER**

- Perform installation and wiring after disconnecting the power supply at all phases externally. If the power is not disconnected at all phases an electric shock or product damage may result.

**CAUTION**

- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire, product failure or malfunction.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Do not short-circuit the 24G and +24V terminals. It may result in fire, product failure or malfunction.
- Attach a warning label (hazard symbol 417-IEC-5036) concerning the electric shock to the location.

**STARTING AND MAINTENANCE PRECAUTIONS**

**DANGER**

- Do not touch the terminals when the power is ON. It may cause an electric shock or malfunction.
- Perform cleaning the module after turning OFF the all external power supply for sure. Failure to do so may cause failure or malfunction of the modules.

**CAUTION**

- Do not disassemble or modify the module. Doing so may cause failure, malfunction, injury, or fire.
- The module case is made of resin; do not drop it or subject it to strong shock. A module damage may result.
- Make sure to switch all phases of the external power supply OFF before installing or removing the module to/from the panel. Failure to do so may cause failure or malfunction of the modules.

**DISPOSAL PRECAUTIONS**

**DANGER**

- When disposing of this product, treat it as industrial waste.

**TRANSPORTATION AND MAINTENANCE PRECAUTIONS**

**CAUTION**

- During transportation avoid any impact as the module is a precision instrument. Doing so could cause trouble in the module.
- If it is necessary to check the operation of module after transportation, in case of any impact damage.

**Notification of CE marking**

This notification does not guarantee that an entire mechanical module produced in accordance with the contents of the notification comply with the following standards. Compliance to EMC standards of the entire mechanical module should be checked by the user / manufacturer.

**Standards with which this product complies**  
 Type : Programmable Controller (Open Type Equipment) Remote I/O module  
 Models : Products manufactured from November 1st, 2002.

Electromagnetic Compatibility Standards (EMC)	Remark
EN61000-6-4:2001 Electromagnetic compatibility -Generic standards - Emission standard for Industrial environment	Compliance with all relevant aspects of the standard. (Radiated Emissions and Mains Terminal Voltage Emissions)
EN61131-2:1994 Programmable controllers /A11: 1996 - Equipment requirements and tests /A12: 2000	Compliance with all relevant aspects of the standard. (RF Immunity, Fast transients, ESD and Damped oscillatory wave)

For more details please contact the local Mitsubishi Electric sales site.  
 -Notes For compliance to EMC regulation.  
 It is necessary to install the CL1 series module in a shielded metal control panel.

**4. Connection to External Equipment**


**4.1 External wiring**

The input and output terminals of the CL1XY2-DT1D5S operate while using the power supplied from the interface.

When connecting a sensor to the input terminal, use a sensor of the NPN open collector transistor type.


The output wiring is fixed to the sink output.

**I/O wiring**

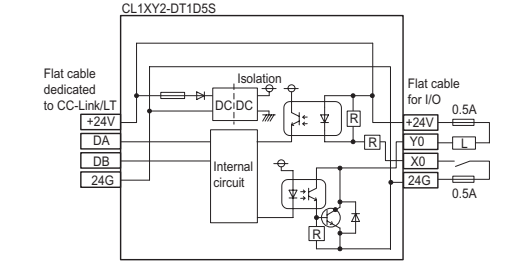

**4.2 Connection to sensor**


• When using a two-wire type sensor • When using a three-wire type sensor

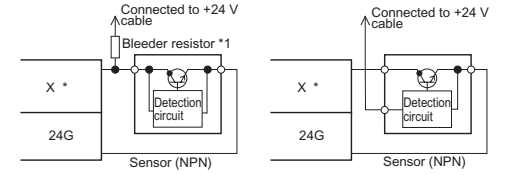

Replace \* in the figure with the used input No.

Notes:

\*1 Bleeder resistor  
 When connecting a two-wire type sensor or input equipment having parallel resistor, select a sensor or equipment whose leakage current is 1.7mA or less.  
 If the leakage current is more than 1.7mA, connect a bleeder resistor obtained in the following calculation formula.

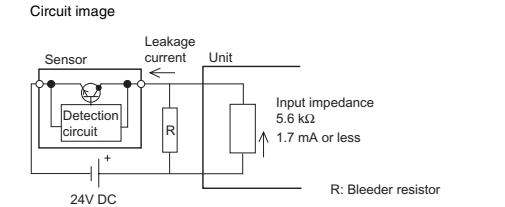

$R(k\Omega) < 1.7(mA) / \text{Leakage current}(mA) - 1.7(mA) \times 5.6(k\Omega)$   
 The power capacity W of the bleeder resistor R is as follows:  
 $W = (\text{Input voltage})^2 / R$

• Make sure that both the ON and OFF time of the input signal are 1.5ms or more.

**5. Specifications**

**5.1 General specifications**

Item	Specification
<b>Ambient working temperature</b>	0 to 55°C (32 to 131°F) (*1)
<b>Ambient storage temperature</b>	-25 to 75°C (-13 to 167°F) (*1)
<b>Ambient operating humidity</b>	Conforming to JIS B3502 and IEC61131-2, Level RH-2 (5 to 95%RH; Dew condensation shall not be considered.)
<b>Ambient storage humidity</b>	Conforming to JIS B3502 and IEC61131-2, Level RH-2 (5 to 95%RH; Dew condensation shall not be considered.)
<b>Vibration resistance</b>	When intermittent vibration is present Frequency: 10 to 57Hz, Acceleration: -, Half amplitude: 0.075mm 57 to 150Hz, 9.8m/s², - 10 to 57Hz, -, 0.035mm
	When continuous vibration is present Frequency: 10 to 57Hz, Acceleration: 4.9m/s², Half amplitude: - 57 to 150Hz, 4.9m/s², -
	10 times in each of X, Y and Z directions (for 80 min)
<b>Impact resistance</b>	Conforming to JIS B3502 and IEC61131-2 (147 m/s², 3 times in each of X, Y and Z directions)
<b>Operating atmosphere</b>	Corrosive gas shall not be present.
<b>Operating altitude</b>	Conforming to JIS B3502 and IEC61131-2 (2,000m(6561'8") or less)(*2)
<b>Installation place</b>	Inside control panel (*3)
<b>Over-voltage category</b>	Conforming to JIS B3502 and IEC61131-2 (Category II or less)(*4)
<b>Degree of contamination</b>	Conforming to JIS B3502 and IEC61131-2, Degree of contamination 2 or less (*5)

Notes:

\*1 The ambient operating/storage temperature satisfies the requirements beyond the specification in the JIS B3502 and the IEC61131-2.

\*2 The module cannot be used in an environment pressurized above the atmospheric pressure which can be generated around the altitude of 0 m. If the module is used in such an environment, it may fail.

\*3 The module can be used in any environment even outside the control panel as far as the requirements of the ambient operating temperature, the ambient operating humidity, etc. are satisfied.

\*4 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300V is 2500V.


\*5 This index indicates the degree of conductive generating substances in the environment in which the module is used. The degree of contamination 2 indicates that contamination is caused by generation of only non-conductive substances. In this degree, however, temporary conduction may be caused by accidental condensation.

**5.2 Input specifications**


Item	Specification
<b>Input method</b>	DC input (using module power supply in common)
<b>Input resistance</b>	EN61131-2, Section 3.3.1.2-Type1
<b>Number of input</b>	1 point
<b>Isolation method</b>	Isolation with photocoupler
<b>Rated input voltage</b>	24V DC
<b>Rated input current</b>	Approx. 4 mA
<b>Operating voltage range</b>	Same as module power supply
<b>Max. simultaneous ON input points</b>	100% (at 24V DC)
<b>ON voltage/ON current</b>	19 V or more/3 mA or more
<b>OFF voltage/OFF current</b>	11 V or less/1.7 mA or less
<b>Input resistance</b>	5.6 kΩ
<b>Response time</b>	OFF→ON: 1.5 ms or less (at 24V DC) ON→OFF: 1.5 ms or less (at 24V DC)
<b>Common wiring method</b>	1 point/1 common (Mutually exclusive output)

**1. Outline of Product**

This product is a cable type composite I/O module connected to CC-Link/LT. This product has one input point (24V DC) and one output point (transistor output).

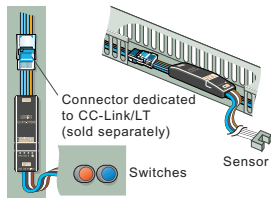

**2. Name and Setting of Each Part**

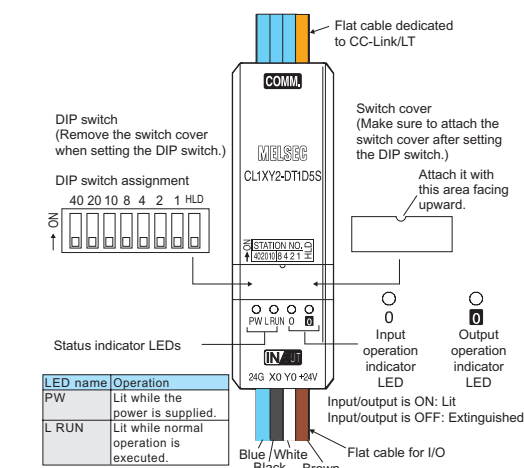

Name	Description
Status indicator LED	PW ON while the power is supplied. L RUN ON while normal operation is executed.
I/O operation indicator LED	ON while the input or output is ON. Extinguished while the input or output is OFF.
Flat cable dedicated to CC-Link/LT	24G DB DA +24V Connector for CC-Link/LT communication line/module power supply
	Blue 24G Black XO White YO Brown +24V Flat cable for I/O
DIP switch	Set the 10's digit of the station No. using "STATION NO. 10", "STATION NO. 20" and "STATION NO. 40". Set the 1's digit of the station No. using "STATION NO. 1", "STATION NO. 2", "STATION NO. 4" and "STATION NO. 8". Factory default = All bits are OFF. Make sure to set the station No. in the range from 1 to 64. Example: When setting the station No. to "32", set the DIP switch as follows.

Station No.	10's digit	1's digit
40	OFF	ON
20	ON	OFF
10	OFF	OFF
8	OFF	ON
4	OFF	OFF
2	ON	OFF
1	OFF	OFF
32	OFF	ON


Name	Description
DIP switch	HLD Holds the output (when an error has occurred). ON: Holds the output. OFF: Clears the output.

**3. Cautions on Handling**


**3.1 Handling of flat cable for I/O**

The cable length from the module to a sensor shall be within 3m(9'10"). Measure the cable outside the module, and confirm that the driving voltage for the used sensor is assured.


• Input

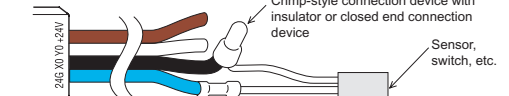


• Output

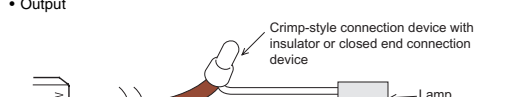

If the diameter of the I/O equipment connection cable is equivalent to the diameter of the flat cable for I/O of this module, connectors dedicated to CC-Link/LT can be used for connection.

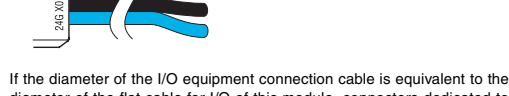


Wire diameter: AWG18 (34/0.18)

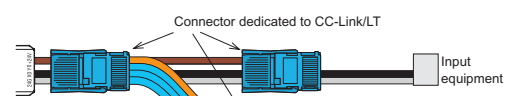

**3.2 Handling of cable**

Do not bend the cable within 30mm(1.18") from the module.

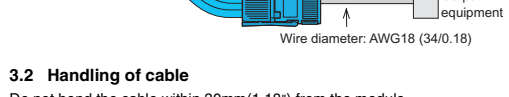

Use a crimp-style terminal in a status in which no force is applied on the cable.

**3.3 Mounting with the CL1-HLD (module holder)**

Refer to the figures below for details on mounting or removing the remote I/O module when used with the CL1-HLD.

